625XCL CUM/LAP SPLIT STOPWATCH
OPERATING INSTRUCTIONS

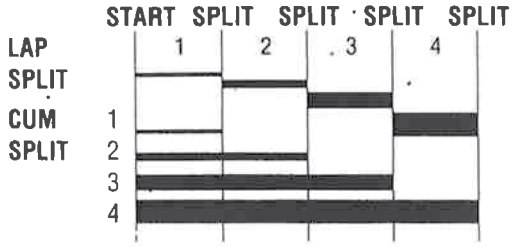

Event
C → Start
C → Stop
C → Restart (time out)
C → Stop
A → Reset

Split (CUM or LAP)
B → LAP or CUM appears
C → Start
A → Split
A → Return to running time
C → Stop
A → Reset

1–2 Fast Split
C → Start
A → Split Display shows first split
C → Stop
A → Display shows second split
A → Reset

NO-PROOF-OF-PURCHASE LIMITED WARRANTY
See label on back of unit for details, or check http://support.ACCUSPLIT.com

SPECIFICATIONS

Operating Temperature
14°F to 138°F (-10°C to 59°C)

Quartz Crystal Accuracy
±0.002% (accuracy may vary with shock, temperature, or aging of crystal).

Batteries
Batteries should last for 3 years. If display becomes dim, open back and replace with Duracell D357, Eveready D357, or Ray-O-Vac RW42.

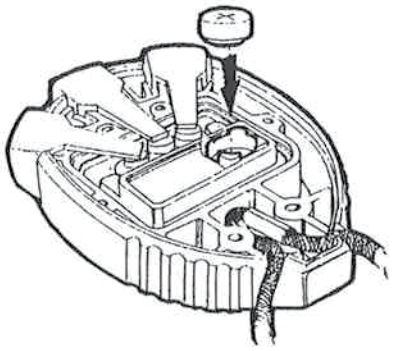

ACCUSPLIT, Inc
3090 Independence Drive, Suite 148
Livermore, CA 94551 USA
800-935-1996 • 925-290-1900
FAX 925-290-1930
www ACCUSPLIT.com • support@ACCUSPLIT.com

Downloaded from www.Manualslib.com manuals search engine